# AMPLIFIER QUICK-START GUIDE

## GTO75.2 II

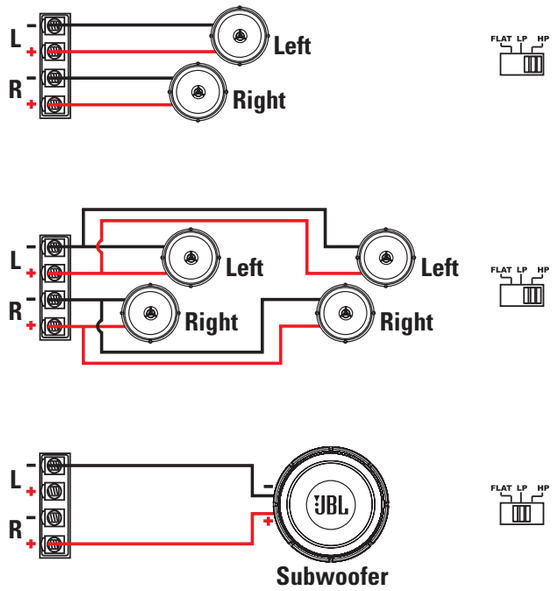


## GTO75.4 II

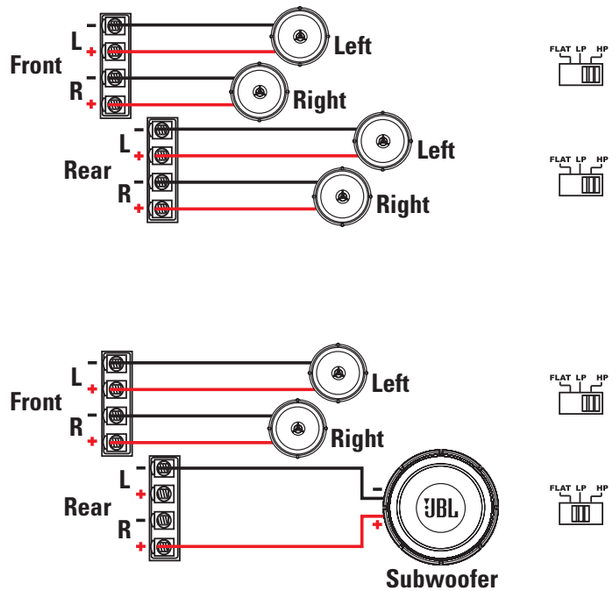


## GTO755.6 II

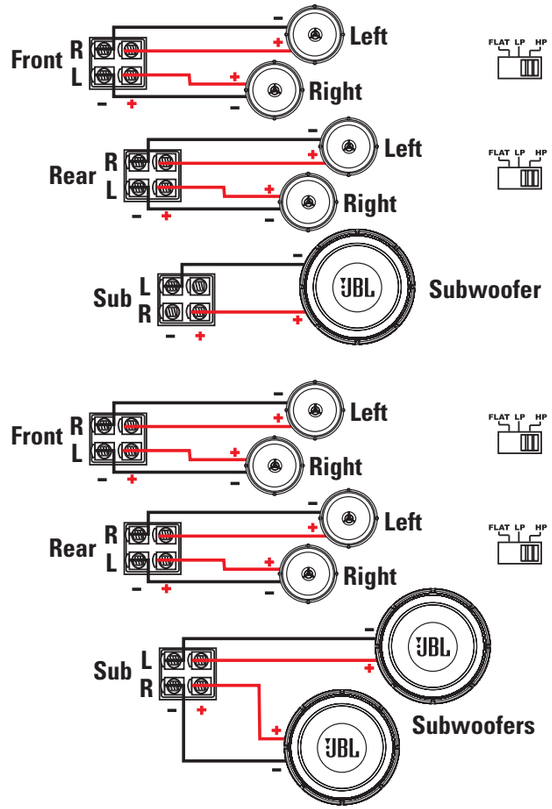


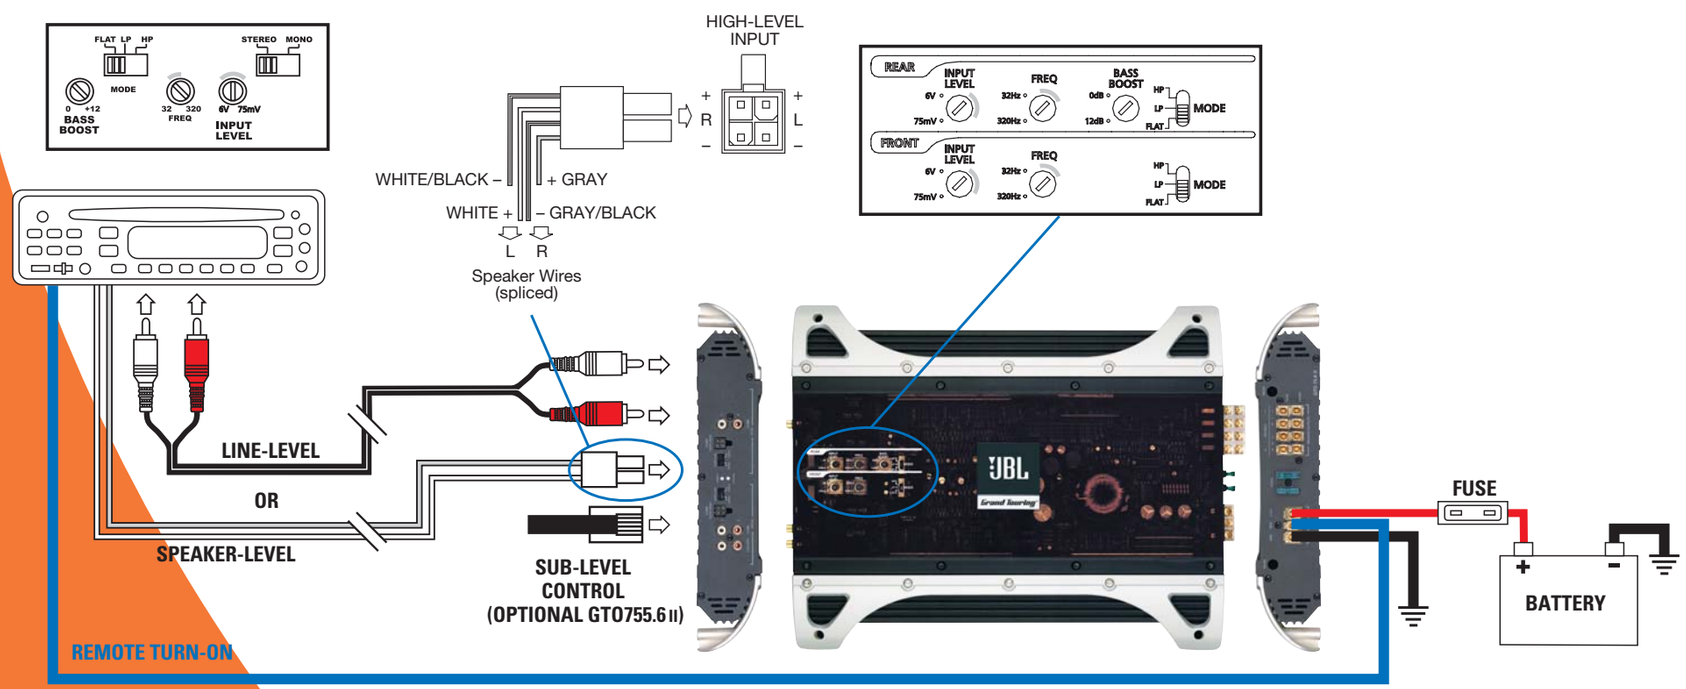


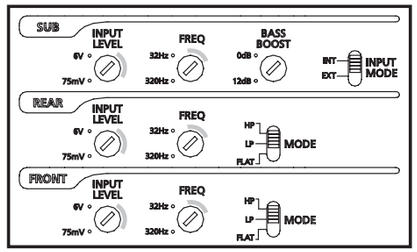


NOTE: Minimum speaker load for all GTO full-range amplifiers is 2 ohms in stereo or 4 ohms when bridged.

*For additional connection options, please refer to owner's manual.

# AMPLIFIER QUICK-START GUIDE

## GTO301.1 II, GTO601.1 II and GTO1201.1 II

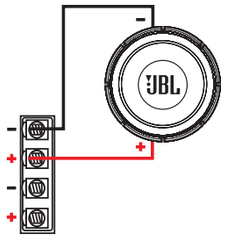

One 4-ohm woofer or one 2-ohm woofer

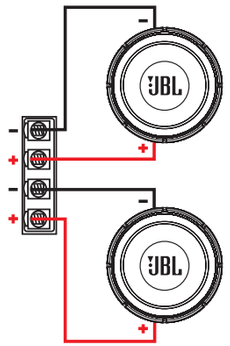

Two 4-ohm woofers = 2-ohm load

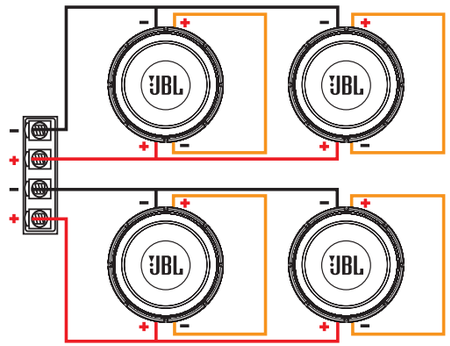

Four 4-ohm DVC woofers = 2-ohm load

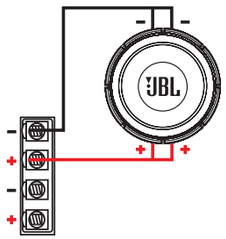

One 4-ohm DVC woofer = 2-ohm load

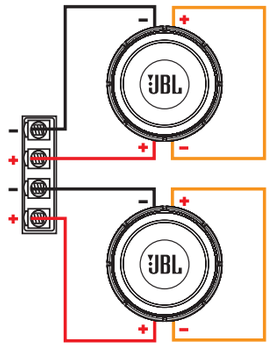

Two 2-ohm DVC woofers = 2-ohm load

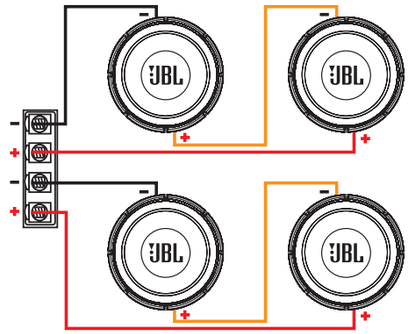

Four 2-ohm woofers = 2-ohm load

NOTE: Minimum speaker load is 2 ohms for all GTO subwoofer amplifiers.

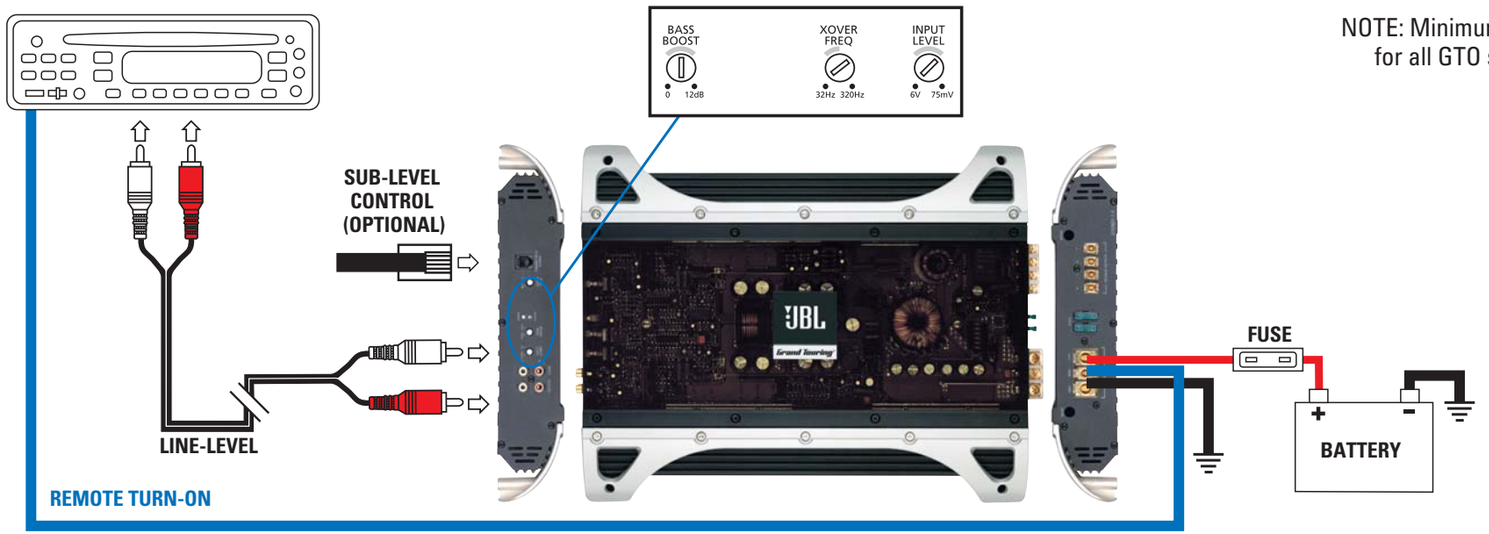


**www.jbl.com**

© 2004 Harman International Industries, Incorporated

A Harman International Company